



NRMCA

What, Why & How? Delamination of Troweled Concrete Surfaces

CONCRETE IN PRACTICE

CIP 20

WHAT are Delaminations?


In a delaminated surface, the top $\frac{1}{8}$ " is densified and separated from the base slab by a thin layer of air or water. The delaminations on the surface of a slab may range in size from several square inches to many square feet and can be detected by a hollow sound when tapped with a hammer or with a heavy chain drag. They may exhibit cracking and color differences because of rapid drying of the thin surface during curing. Traffic or freezing may break away the surface in large sheets. They are similar to blisters, but much larger (see CIP 13).

Delaminations form during final troweling. They are most frequent in early spring and late fall when concrete is placed on a cool subgrade with rising daytime temperatures, but they can occur anytime.

WHY Does Delamination Occur?

Delamination occurs when the fresh concrete surface is sealed by troweling while the underlying concrete is plastic and bleeding or able to release air. Delaminations form fairly late in the finishing process after floating and after the first troweling. Rapid evaporation of bleed water due to surface drying (wind, sun, or low humidity) makes the surface appear ready to trowel while the underlying concrete is plastic and can still bleed or release air. Vapor barriers under slabs force water to rise and compound the problem. The use of fly ash and chemical retarders will delay initial set of the underlying concrete and allow bleed water and air to move upward after the surface is sealed.

Entrained air reduces bleeding and promotes early finishing which will produce a dense impermeable surface layer. A cool subgrade delays set in the bottom relative to the top. Air and water collect under the dense surface layer during finishing.

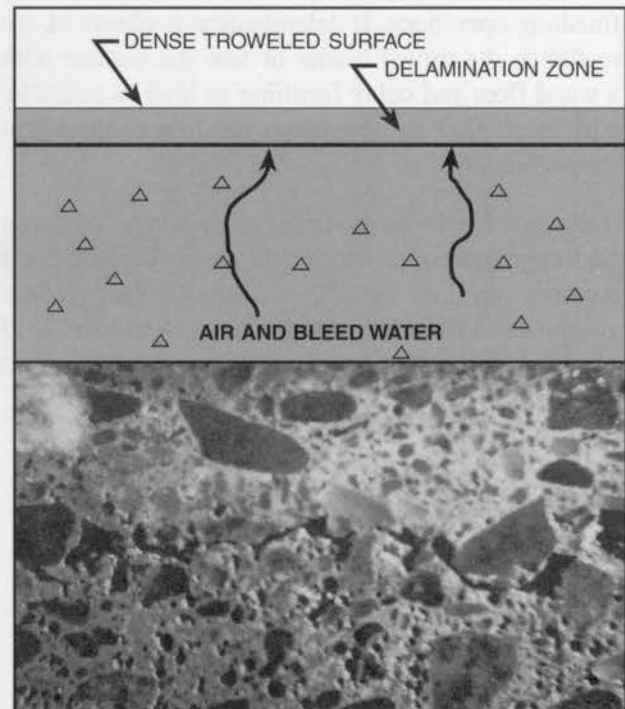

Delaminated Concrete

Delamination is more likely to form if:

1. The underlying concrete sets slowly because of a cool subgrade.
2. Set is retarded by retarders and/or fly ash.
3. Entrained air is used (or is higher than normal).
4. Use of a jitterbug or vibrating screed brings too much mortar to the surface.
5. A dry shake is used, particularly with air-entrained concrete.
6. The concrete is sticky from higher cementitious material or sand content.
7. The slab is thick.
8. The slab is placed directly on a vapor barrier.

HOW to Prevent Delamination

Be wary of a concrete surface that appears to be ready to trowel before it would normally be expected. Emphasis in finishing should be on screeding, straight-edging, and floating the concrete as rapidly as possible—without working up an excessive layer of mortar.

Further finishing should be delayed as long as possible, and the surface covered with polyethylene or otherwise protected from evaporation. In initial floating, the float blades should be flat to avoid densifying the surface too early. Accelerators or heated concrete often prevent delamination in cool weather.

Delamination may be difficult to detect during finishing operations. If delamination is observed, try to flatten the trowel blades or tear the surface with a wood float and delay finishing as long as possible. Any steps that can be taken to slow evaporation should help.

If a vapor barrier is required, place a layer of damp fine aggregate over the plastic sheet. Do not place concrete directly on a vapor barrier. Do not use air-entrained concrete in floor slabs which have a hard troweled surface and which will not be subject to deicing salts.



Delaminated Concrete

References

1. "Guide for Concrete Floor and Slab Construction," ACI 302.1R, American Concrete Institute, Farmington Hills, MI.
2. "Finishing," Concrete Construction, August 1976, p. 369.
3. J. C. Yeager, "Finishing Problems and Surface Defects in Flatwork," Concrete Construction, April 1979, pp. 247-258.
4. Problems and Practices, ACI Journal, December 1955, p. 492.
5. "Caution-Delamination of Industrial Floors on Grade," NRMCA Technical Information Letter No. 470, June 21, 1989.

Follow These Rules to Avoid Delamination

1. Do not seal surface early—before air or bleed water from below have escaped.
2. Avoid dry shakes on air-entrained concrete.
3. Use heated or accelerated concrete to promote even setting throughout slab depth.
4. Do not place concrete directly on vapor barriers.
5. Do not use air-entrained concrete unless it will be exposed to deicing salts.
6. Avoid placing concrete on substrate with a temperature of less than 40° F.



Technical information prepared by
National Ready Mixed Concrete Association
900 Spring Street
Silver Spring, Maryland 20910

© National Ready Mixed Concrete Association.
All rights reserved.

No part of this publication may be reproduced in any form, including photocopying or other electronic means, without permission in writing from the National Ready Mixed Concrete Association.